

Replacing Fuses

If the unit does not function at all when connected to the main power supply i.e. does not illuminate after replacing the lamp. Then it is highly likely that the fuse has blown.

Disconnect from main power supply before attempting to replace either lamps or fuse.

In order to replace the fuse, disconnect from the main power supply first, and then unscrew the fuseholder cover to reveal the fuse. The unit has a label attached which indicates the correct fuse rating and you will also find this listed as part of the specifications for the unit later in this guide. It is most important that replacement fuses are of the correct rating. Failure to use the correct fuse could damage the lighting effect beyond economic repair.

The fuse should simply be placed inside the holder and the screw cap replaced, when this is done connect to the main power supply to check. If the unit is still not working then please contact your dealer or CHAUVET for servicing.

Caution

Do not touch unit or lamps while hot.

No user serviceable parts inside, please refer to CHAUVET for service.

Power Connections

The unit is supplied with a power plug appropriate to its voltage and destination. Should any other connections be required they must be carried out with the following configuration.

Earth = Green/Yellow cable

Neutral = Blue cable

Live = Brown cable

In the USA & Europe, it is required that all plugs are 3-pin type i.e. with Earth/Ground connection. In the UK, it is required that all mains plugs are fitted with 5A fuses.

Technical Specifications

Power	120V~60Hz AC	230V~50Hz AC
Fuses	20mm Glass 3.15A Quick Blow	20mm Glass 1.6A Quick Blow
Control In/Out	2 x 5-pin (180°) DIN twistlock sockets	2 x 5-pin (180°) DIN twistlock sockets
Lamps	1 x 120V 300W Part No 64514	1 x 230V 300W Part No 64516
Dimensions	114mm x 241mm x 241mm / 4.5in x 9.5in x 10.5in?	
Weight	1.81kg / 4lbs	



Tracer

Linkable Head

CH-210-SH

Users Guide

Please read these instructions carefully before use

World-wide Headquarters:

3000 North 29th Ct., Hollywood, Florida, USA, FL 33020

Tel: +1-954-929-1115 Fax: +1-954-929-5560


European Office:

Unit 18, Hunslet Trading Estate, Leeds, UK

LS10 1BL

Tel: +44(0)113-276-0755 Fax: +44(0)113-277-6675

www.ChauvetLighting.com

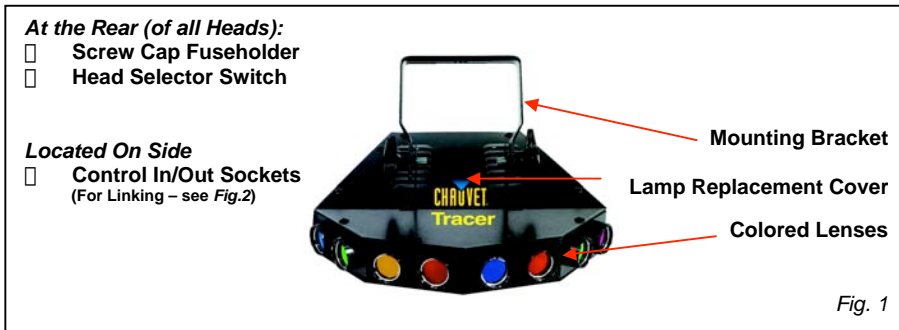

Introduction

Congratulations on the purchase of your new CHAUVET lighting effect. We are confident you will enjoy many trouble free hours with this unit. To assist with the care and use of the product we have prepared this short guide.

Setting-Up

This lighting effect has been designed to function on a mains power supply of either 120V~60Hz or 230V~50Hz and has been fitted with a suitable power plug for use with your local voltage. Check the label and the power plug for the correct voltage before switching on.

As this unit is a linkable head it can only be used in conjunction with a master head from any of the CH-208 Rotating Moons, CH210 Tracer, CH-211 Starburst or CH-214 Tetra 4-head systems.

Before use for the first time you must install the lamp (see 'Replacing Lamps' for details). Once this is done decide on your location and link to the master head (see 'Linking' and diagram – fig.2).

Operation

The operation of this unit is determined by the settings on the master head. The user guide for any of the CH-208 Rotating Moons, CH-210 Tracer or CH-211 Starburst 4-head systems explains the available functions in detail.

Installation / Mounting

Although this unit can be used in an upright position. It is recommended that, for safety purposes, your lighting effects be properly mounted using a suitable hanging clamp and safety cable. CHAUVET offers a range of items, which are ideal for safe mounting.

Replacing Lamps

1. Disconnect from main power supply before attempting to replace lamps or fuses.
2. Ensure that the unit is sufficiently cool, before removing blown lamps.
3. Never touch new lamps with your fingers: use a tissue or a cloth.

In order to replace the lamp, disconnect from main power supply first, and unscrew the lamp replacement cover, which is highlighted on the diagram (fig.1). Only use the appropriately rated lamp as use of any other lamp type may cause the unit to be non-operational.


Due to the nature of halogen lamps it is vitally important that you do not touch the new replacement lamp with your fingers, as this will reduce lamp life considerably. Once again a tissue or cloth can be used for fitting the replacement lamp. Finally before switching on, check

that the lamp is housed correctly in the lamp holder and that the lamp replacement cover has been screwed back into place.

If after replacement of the lamp, the unit is still not working then please contact your dealer or CHAUVET for servicing.

Linking

With the cables provided you can link one master with fifteen linkable heads for synchronized control from the master head, see diagram (fig.2). The socket is such that it will only allow you to plug the cable in the correct way, once connection has been made a twistlock mechanism secures the cable firmly in place. Any number of linkable heads may be linked in this way, provided the master head is first in the chain.

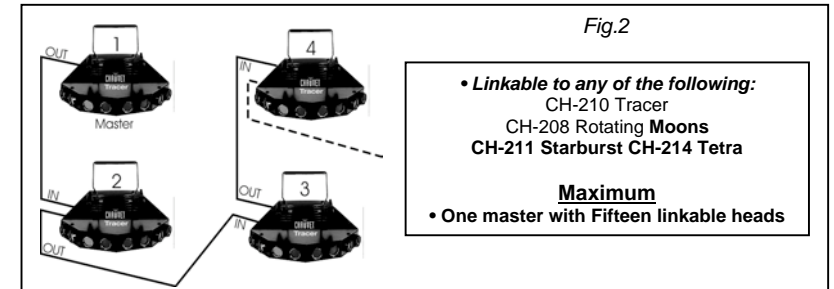

Once the heads have been linked correctly, as shown, then it is necessary to select the appropriate channel for each head. On the rear of each 'linkable' unit you will find a rotary selector which has positions 1 to 4 clearly marked.

With this you can designate which head will synchronize with another i.e. all heads selected as '1' will light together, all those selected as '3' will light together, etc. This is particularly useful if you have a multi-head system, for example, 8 heads linked together would mean you could have 2 of each channel selected.

The beauty of the CHAUVET 'multi-link' operation is the compatibility with other models and systems in the range. See diagram (fig.2) for a list of all the products which you can hook up together in this way. A great way to improve your lightshow at little cost!

Cleaning

The most important part of your lighting effects to keep clean are the lenses as they allow the light output to transmit. These should be cleaned with a soft damp cloth. The body of the units may also be cleaned in the same way. We recommend internal cleaning be carried out by a fully qualified technician.

Maintenance & Servicing

Work on internal parts should be carried out by a qualified technician. Removal of any covers other than the lamp replacement access is considered a breach of warranty and will not be covered under any such agreement unless authorized first by the company.

Troubleshooting

- If unit is not functional – check main power supply is 'on' and check fuses.
 - If unit does not light – check head selector switch is correctly set, if ok, then lamp or fuse may require replacing.
- If after trying this solution you still have a problem contact your dealer or CHAUVET.