

**DMX Channel Values**

Channel	Value	Function
1	000 ⇔ 219 220 ⇔ 239 240 ⇔ 255	<b>Speed</b> Fast > Slow Sound activated mode; Slow Sound activated mode; Fast
2	000 ⇔ 009 010 ⇔ 019 020 ⇔ 029 030 ⇔ 039 040 ⇔ 049 050 ⇔ 059 060 ⇔ 069 070 ⇔ 079 080 ⇔ 089 090 ⇔ 099 100 ⇔ 109 110 ⇔ 119 120 ⇔ 129 130 ⇔ 139 140 ⇔ 149 150 ⇔ 159 160 ⇔ 255	<b>Color</b> Closed White/Open Magenta Amber Cyan Dark Green Pink Blue Red Yellow Green Dark Red Dark Pink UV-Purple Light Blue Orange Color Scroll: Speed set by channel (1)
3	000 ⇔ 100 101 ⇔ 120 121 ⇔ 140 141 ⇔ 160 161 ⇔ 180 181 ⇔ 200 201 ⇔ 255	<b>Strobe</b> No Strobe 1 strobe per second 2 strobos per second 3 strobos per second 4 strobos per second 5 strobos per second 6 strobos per second
4	000 ⇔ 255	<b>Dimming</b> 0% ⇔ 100%