

DMX Channel Values

Channel	Value	Function
1	000 ⇄ 009	Gobo/Color Closed
	010 ⇄ 019	White (Open)
	020 ⇄ 029	Gobo-Color 1
	030 ⇄ 039	Gobo-Color 2
	040 ⇄ 049	Gobo-Color 3
	050 ⇄ 059	Gobo-Color 4
	060 ⇄ 069	Gobo-Color 5
	070 ⇄ 079	Gobo-Color 6
	080 ⇄ 089	Gobo-Color 7
	090 ⇄ 099	Gobo-Color 8
	100 ⇄ 109	Gobo-Color 9
	110 ⇄ 119	Gobo-Color 10
	120 ⇄ 129	Gobo-Color 11
	130 ⇄ 139	Gobo-Color 12
	140 ⇄ 149	Gobo-Color 13
	150 ⇄ 159	Gobo-Color 14
160 ⇄ 249	Gobo Spin: Fast > Slow	
250 ⇄ 255	Sound Active	
2	000 ⇄ 010	Strobe (gobo-strobe) Open
	011 ⇄ 255	Strobe: Slow > Fast (adjacent gobos)
3	000 ⇄ 255	Pan 0° ~ 180°
4	000 ⇄ 255	Tilt 0° ~ 90°