

## DMX Channel Values

Channel	Value	Function
1	000 ⇄ 015	<b>Strobe</b>
	016 ⇄ 091	Gobo Stopped
	092 ⇄ 135	Adjacent gobo strobe: Slow > Fast
	136 ⇄ 195	Adjacent color strobe: Slow > Fast
	196 ⇄ 255	Adjacent color and gobo strobe: Slow > Fast Gobo Bounce™: Slow > Fast
2	000 ⇄ 007	<b>Gobo</b> Blackout
	008 ⇄ 015	Open
	016 ⇄ 023	Gobo 1
	024 ⇄ 031	Gobo 2
	032 ⇄ 039	Gobo 3
	040 ⇄ 047	Gobo 4
	048 ⇄ 055	Gobo 5
	056 ⇄ 063	Gobo 6
	064 ⇄ 071	Gobo 7
	072 ⇄ 079	Gobo 8
	080 ⇄ 087	Gobo 9
	088 ⇄ 095	Gobo 10
	096 ⇄ 103	Gobo 11
	104 ⇄ 111	Gobo 12
112 ⇄ 119	Gobo 13	
120 ⇄ 127	Gobo 14	
128 ⇄ 255	Gobo Spin: Slow > Fast	
3	000 ⇄ 010	<b>Color</b> Open/White
	011 ⇄ 012	Red
	022 ⇄ 023	Dark Blue
	033 ⇄ 034	Yellow
	044 ⇄ 045	Green
	055 ⇄ 065	Pink
	066 ⇄ 076	UV
	077 ⇄ 087	Cyan
	088 ⇄ 098	Orange
	099 ⇄ 109	Magenta
	110 ⇄ 120	Tri-Color (Red-White-Blue)
121 ⇄ 127	Quad-Color	
128 ⇄ 255	Color Spin: Slow > Fast	
4	000 ⇄ 255	<b>Pan or Barrel Orientation</b> 0° - 180°
5	000 ⇄ 255	<b>Tilt (DMX-605A)</b> 0° - 90°
	000 ⇄ 120	<b>Barrel Rotation (DMX-610A)</b> 360° clockwise rotation: Fast > Slow
	121 ⇄ 136	Stop
	137 ⇄ 245	360° counter-clockwise rotation: Slow > Fast
	246 ⇄ 255	Stop