

## DMX Channel Values

Channel	Value	Function
1	000 ⇄ 009	<b>Gobo</b> Closed
	010 ⇄ 019	White (Open)
	020 ⇄ 029	Gobo 1
	030 ⇄ 039	Gobo 2
	040 ⇄ 049	Gobo 3
	050 ⇄ 059	Gobo 4
	060 ⇄ 069	Gobo 5
	070 ⇄ 079	Gobo 6
	080 ⇄ 089	Gobo 7
	090 ⇄ 099	Gobo 8
	100 ⇄ 109	Gobo 9
	110 ⇄ 119	Gobo 10
	120 ⇄ 129	Gobo 11
	130 ⇄ 139	Gobo 12
	140 ⇄ 149	Gobo 13
	150 ⇄ 159	Gobo 14
160 ⇄ 249	Gobo Spin: Slow > Fast	
250 ⇄ 255	Sound Active	
2	000 ⇄ 009	<b>Color</b> White (Open)
	010 ⇄ 019	Color 1
	020 ⇄ 029	Color 2
	030 ⇄ 039	Color 3
	040 ⇄ 049	Color 4
	050 ⇄ 059	Color 5
	060 ⇄ 069	Color 6
	070 ⇄ 079	Color 7
	080 ⇄ 089	Color 8
	090 ⇄ 099	Color 9
	100 ⇄ 109	Color 10
	110 ⇄ 119	Color 11
120 ⇄ 255	Color Spin: Slow > Fast	
2	000 ⇄ 045	<b>Strobe (gobo-strobe)</b> Open
	046 ⇄ 115	Gobo/Color Strobe: Slow > Fast
	116 ⇄ 185	Color Strobe: Slow > Fast
	186 ⇄ 255	Gobo Strobe: Slow > Fast
3	000 ⇄ 255	<b>Pan</b> 0° ~ 180°
4	000 ⇄ 255	<b>Tilt</b> 0° ~ 84°