

DMX Control Mode

The COLORboss™ will respond to 4 channels of DMX control. The same functions that are accessible manually are also accessible remotely using an external universal DMX controller. It is important to remember that when controlling the COLORsplash™ fixtures through the COLORboss™ you are no longer controlling the pars individually, only the COLORboss™ controller.

1. Press the **MENU** repeatedly until you reach "15 DMX Control".
2. Press **SETUP** button to enter mode.
3. Press **UP** or **DOWN** buttons to change the DMX starting address for the controller.
4. You must leave this menu selection on screen in order for this mode to remain active.

DMX Channel Values

| DEFAULT | VALUE | FUNCTION | | |
|---------|-----------|---|--------------------------------|--------------------------------|
| 1 | 000 ⇔ 019 | Programs | | |
| | 020 ⇔ 039 | Black | | |
| | 040 ⇔ 058 | Red | | |
| | 059 ⇔ 078 | Green | | |
| | 079 ⇔ 098 | Yellow | | |
| | 099 ⇔ 117 | Blue | | |
| | 118 ⇔ 137 | Purple | | |
| | 138 ⇔ 156 | Cyan | | |
| | 157 ⇔ 176 | White | | |
| | 177 ⇔ 196 | Color Change | | |
| | 197 ⇔ 215 | Slow Flow 1 | | |
| | 216 ⇔ 235 | Slow Flow 2 | | |
| | 236 ⇔ 254 | Flash | | |
| | 255 | Chase | | |
| 2 | 000 ⇔ 255 | Sound | | |
| | | Qty of Fixtures 1 par can > 20 par cans | | |
| 3 | 000 ⇔ 255 | Color Change | Flash | Chase |
| | | Slow Flow1 | | Sound |
| 4 | 000 ⇔ 255 | Slow Flow2 | | |
| | | Run Speed 1 > 100% | Flash Speed 1 > 100% | Chase Program 1 > 16 |
| 4 | 000 ⇔ 255 | Chase Speed 1 > 100% | | |