

DMX Values

CHANNEL	VALUE	FUNCTION
1	000 ⇔ 255	Pan Left > Right (128 = center)
2	000 ⇔ 255	Tilt Up > Down (128 = center)
3	000 ⇔ 255	Pan (Fine) 16 bit
4	000 ⇔ 255	Tilt (Fine) 16 bit
5	000 ⇔ 255	Pan/Tilt Speed Fast > Slow
6	000 ⇔ 127 128 ⇔ 139 140 ⇔ 229 230 ⇔ 239 240 ⇔ 255	Lamp on/off & Reset No Function Lamp on after 3 seconds when lamp is off Fixture reset when lamp is on No Function Lamp off after 3 seconds No Function
7	000 ⇔ 015 016 ⇔ 029 030 ⇔ 043 044 ⇔ 057 058 ⇔ 071 072 ⇔ 085 086 ⇔ 099 100 ⇔ 113 114 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Color Wheel White (Open) Red Yellow Magenta Green Orange Blue Pink UV Rainbow effect: Fast > Slow (clockwise) No rotation Rainbow effect: Slow > Fast (counter-clockwise)
8	Reserved	No Function
9	000 ⇔ 031 032 ⇔ 063 064 ⇔ 095 096 ⇔ 127 128 ⇔ 159 160 ⇔ 191 192 ⇔ 223 224 ⇔ 255	Shutter/Strobe Closed Open Strobe: Slow > Fast (max 10fps) Open Pulse Strobe: Slow > Fast Open Random Strobe: Slow > Fast Open
10	000 ⇔ 255	Dimmer Intensity: 0 – 100%