

DMX Channel Values

CHANNEL	VALUE	FUNCTION
1	000 ⇔ 127	Operating Mode Auto Run
	128 ⇔ 255	Sound-active Run
2	000 ⇔ 022	Programmed Patterns Blackout
	023 ⇔ 045	Chase from left to right
	046 ⇔ 068	Flow from left to right
	069 ⇔ 091	Chase from right to left
	092 ⇔ 114	Flow from right to left
	115 ⇔ 137	Chase from left to right then right to left
	138 ⇔ 160	Flow from left to right then right to left
	161 ⇔ 183	Chase from center to two ends
	184 ⇔ 206	Flow from center to two ends
	207 ⇔ 229	Chase from two ends to center
	230 ⇔ 252	Flow from two ends to center
3	253 ⇔ 255	All flash
	000 ⇔ 255	Program Speed Speed: Slow ⇔ Fast

Telephone: (954) 929-1115 - (Press 4)
 Fax: (954) 929-5560 - (Attention: Service)
 Website: <http://www.chauvetlighting.com>