

DMX-40 Quick Start



Features

- runs 12 fixtures
- 16 channels per fixture
- 192 total channels
- 30 banks of 8 scenes
- 6 chases of 240 scenes

Programming Scenes

1. press and hold **program** button until LED blinks.
2. press **blackout** button to disengage blackout.
3. press **scanner** button to choose fixture.
4. adjust sliders to desired settings for scene.
5. to program another fixture for this scene, press **scanner** button of fixture you just finished. This hold fixture in settings you chose.
6. repeat steps 3, 4, 5 until scene is set.
7. press **Midi/Add** button until LED blinks.
8. press **scene** button until LED blinks to store scene.
9. repeat steps 3-8 to record desired amount of scenes.
10. press and hold **program** button until LED blinks to exit program mode.

Programming Chase

1. press and hold **program** button until LED blinks.
2. press **blackout** button to disengage blackout.
3. press **chase** button you wish to program.
4. select scene.
5. press and hold **Midi/Add** until LED blinks.
6. repeat steps 3, 4, 5 until all scenes you want are set.
7. press and hold **program** button until LED blinks to save chase.

Playback of Chase

1. adjust **speed and fade** sliders to lowest setting as starting point.
2. press **blackout** button to disengage blackout.
3. press **Auto/Music/Tap Sync** button and chase begins.

Linking Chases

1. press **Auto/Music/Tap Sync** button.
2. press simultaneously chase buttons you wish to link.

Congratulations on completing the DMX-40 Quick Start. For more indepth descriptions and features of this controller, please refer to the User Manual.